

Hill-Rom

Art of Care® Large Capacity Chair



Opera



Artisan



Metropolitan



Aero



At a glance

- Four unique aesthetic styles
- Three seat width options to accommodate users up to 750 lbs
- STEELock™ construction ensures superior structural integrity
- Replaceable components for easy updates
- ConformBack™ option available for extra back comfort

Hill-Rom® meets the needs of all healthcare users with dignity, style and comfort.

Whether inside the patient room or in the public areas of a healthcare setting, Hill-Rom's Metropolitan™, Artisan™, Aero™ and Opera™ Visitor Chairs provide unprecedented comfort, style and durability – at high weight ratings. Designed to provide comfortable seating support for heavier users without the awkward appearance of some large capacity seating, these chairs are everything you would expect from a market leader in healthcare seating products. Our patented, fully suspended seating construction achieves 500 lbs. weight ratings in 24" seat width and 750 lbs. in 30" or 40" seat width without the use of uncomfortable plywood decking, for superior comfort.

Hill-Rom®

Enhancing Outcomes for Patients and Their Caregivers.™

Hill-Rom


Art of Care® Large Capacity Chair

Large capacity styles with the quality you expect.

Crafted specifically with large capacity healthcare needs in mind and built out of the finest materials available, these chairs add visual appeal to healing environments while providing an equally attractive return on investment. The wide range of vinyls, performance fabrics, powder coat paints, wood finishes, arm inserts and options provide for extensive aesthetics flexibility. Special customization is available to fit every design needs. Not only do these chairs

support high weights effortlessly, but replaceable seat covers and arm caps mean style updates are easy.

Hill-Rom® uses Healthcoat 222™ to bake and seal the finish directly into the wood for legendary cleanability. You can count on Hill-Rom's Metropolitan™, Artisan™, Aero™ and Opera™ Large Capacity Chairs to perform beautifully in healthcare environments, offering dignity and comfort, in a variety of attractive options.

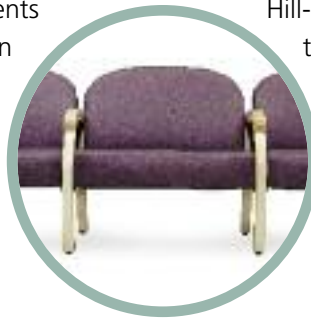

Seamless Match in Three Available Widths

Our Large Capacity Chairs are designed to blend perfectly with our standard weight capacity seating options. Choose from 24", 30" and 40" widths.

ConformBack™ Option

Flexible top back for extra comfort



Product B40R Arm insert N/A Base Finish HM Caps Finish HM Upholstery C33



Product B400 Arm insert N/A Base Finish 31 Caps Finish 31 Upholstery C30




STEELock™ Construction

Triangulated steel construction and steel-on-steel structural connections provide strength and durability.



Arm Grip

All four styles have extended arm grips to assist user during ingress and egress.

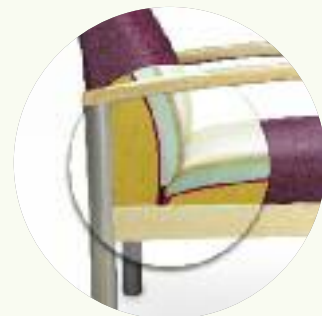

Comfortable Fit

Spring box seat and back construction creates a custom fit for each user. The multi-foam layering system ensures long lasting comfort.



Artisan Arm Insert

Artisan chairs can receive Mission (pictured), Chipendale, Wheel or Upholstered arm inserts for greater personalization. Customized arm inserts are also available.

Arm Caps Finishes

A variety of finishes are available to match your decor.



Product B40A Arm insert NONE Base Finish CC Caps Finish CC Upholstery B69

Metropolitan Urethane Arm Option

Urethane arms are available for comfortable extra durability.



Product B40M Arm insert N/A Base Finish 31 Caps Finish 31 Upholstery B93 Powder Coat QSL

Replaceable Wood Arm Caps

High-use components are easily replaced to help keep chair looking new.




Cleanout Space

The convenient cleanout space makes cleanups simple.



Replaceable Seat Covers

Seat covers are easily replaced for updates as needed.

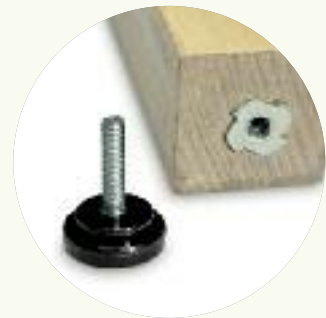

Screw-in Glides

Our world-class glides stand up to heavy use and allow for adjustment.

Hill-Rom

Art of Care® Large Capacity Chair



Specifications



B24R B30R B40R

Aero™

Large Capacity Chair

24" Chair: **W** 28.00 **D** 25.875 **H** 34.50

SW 24.25 **SD** 17.625 **SH** 18.125

30" Chair: **W** 35.00 **D** 25.50 **H** 34.50

SW 31.25 **SD** 17.50 **SH** 18.00

40" Chair: **W** 45.00 **D** 25.50 **H** 34.50

SW 41.25 **SD** 17.50 **SH** 18.00

COM Ydg: 24"-2.0, 30"-2.5, 40"-2.625

24" Maximum Weight: 500 lbs.

30" & 40" Maximum Weight: 750 lbs.



B24O B30O B40O

Opera™

Large Capacity Chair

24" Chair: **W** 28.00 **D** 26.75 **H** 33.625

SW 24.25 **SD** 18.75 **SH** 18.25

30" Chair: **W** 35.00 **D** 28.00 **H** 33.50

SW 31.25 **SD** 19.25 **SH** 17.75

40" Chair: **W** 45.00 **D** 28.00 **H** 33.50

SW 41.25 **SD** 19.25 **SH** 17.75

COM Ydg: 24"-2.0, 30"-2.5, 40"-2.625

24" Maximum Weight: 500 lbs.

30" & 40" Maximum Weight: 750 lbs.



B24A B30A B40A

Artisan™

Large Capacity Chair

24" Chair: **W** 29.00 **D** 24.50 **H** 33.75

SW 24.25 **SD** 17.00 **SH** 18.25

30" Chair: **W** 36.00 **D** 24.50 **H** 34.00

SW 31.25 **SD** 17.00 **SH** 17.75


40" Chair: **W** 46.00 **D** 24.50 **H** 34.00

SW 41.25 **SD** 17.00 **SH** 17.75

COM Ydg: 24"-2.0, 30"-2.5, 40"-2.625

24" Maximum Weight: 500 lbs.

30" & 40" Maximum Weight: 750 lbs.



B24M B30M B40M

Metropolitan™

Large Capacity Chair

24" Chair: **W** 29.25 **D** 27.50 **H** 33.75

SW 24.50 **SD** 18.75 **SH** 18.00

30" Chair: **W** 36.50 **D** 26.50 **H** 34.00

SW 31.50 **SD** 18.75 **SH** 18.25

40" Chair: **W** 46.50 **D** 26.50 **H** 34.00

SW 41.50 **SD** 18.75 **SH** 18.25

COM Ydg: 24"-2.0, 30"-2.5, 40"-2.625

24" Maximum Weight: 500 lbs.

30" & 40" Maximum Weight: 750 lbs.

Ordering Key

Product	Arm Insert	CAL 133	Options	Base Finish	Arm Cap Finish ¹	Upholstery	Powder Coat
PLEASE SPECIFY THE FOLLOWING FOR EACH VISITOR CHAIR							
Please specify Product from list above by Four Digit Product Code. For any product not shown above, please submit a Request for Special.	Mission, Chipendale, Wheel or Upholstered inserts available on all Artisan Seating. Specials available.	CAL 133	ConformBack™. Specials available.	See Hill-Rom Finish Options brochure ² or visit www.hill-romdesign.com	See Hill-Rom Finish Options brochure ² or visit www.hill-romdesign.com Urethane Arms on Metropolitan.	See Hill-Rom Performance Collection cards ³ or visit www.hill-romdesign.com	Metropolitan only – See Hill-Rom Finish Options brochure ² or visit www.hill-romdesign.com

¹CTG 255rb. ²Vinyl CTG 659, Designer Vinyl CTG 660. ³Arm Cap Finish different from base as part of base price.

Hill-Rom reserves the right to make changes without notice in design, specifications and models.

© 2006 Hill-Rom Services, Inc.

ALL RIGHTS RESERVED.

CTG728ra 1/12/05

USA • 800-445-3730 • Fax 812-934-8189

Canada • 800-267-2337 • Fax 905-206-0561

www.hill-rom.com

Hill-Rom

Enhancing Outcomes for Patients and Their Caregivers.™